



I.

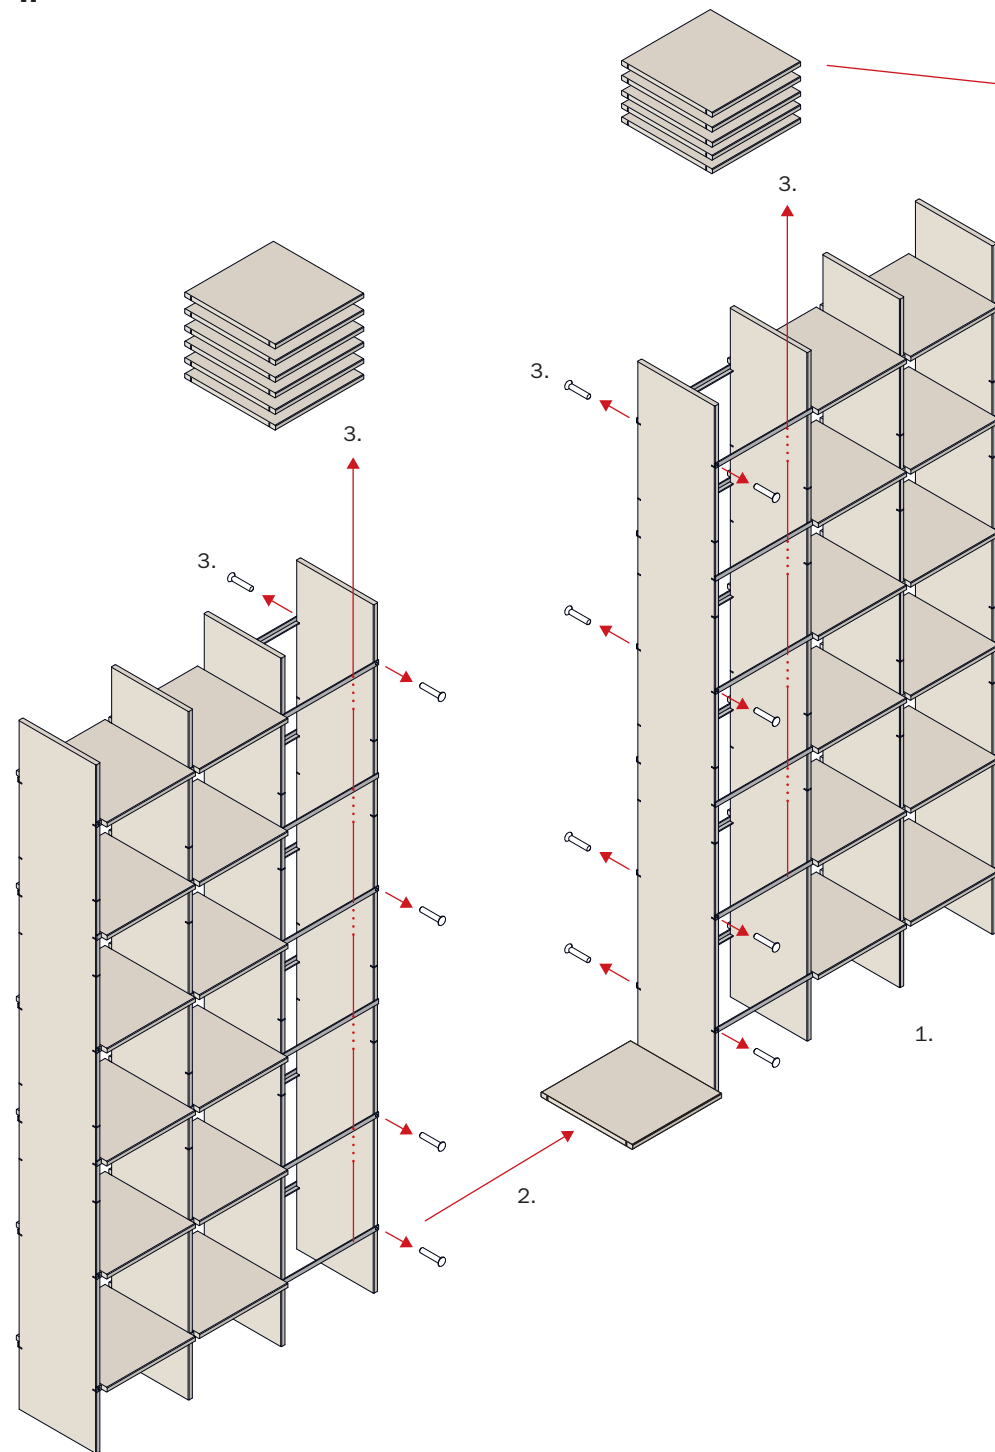

II.

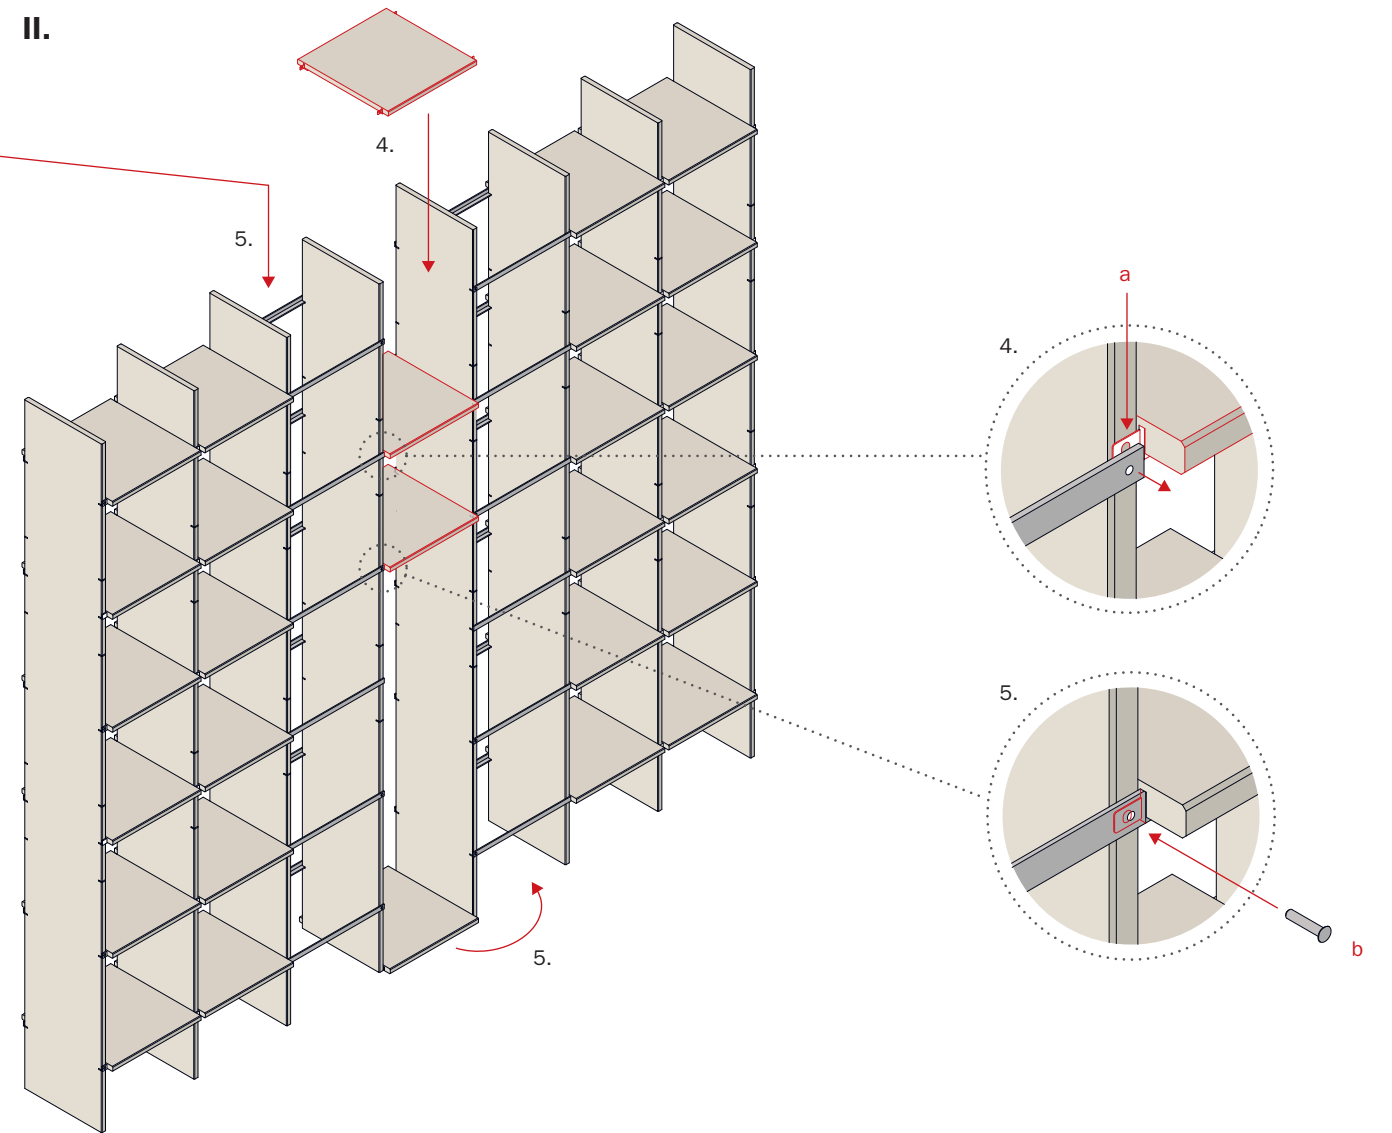

I.

Das FNP Verbindungstablär ermöglicht die (nachträgliche) Erweiterung eines FNP Regals in der Breite. Dabei werden zwei eigenständige Regale zu einer Regaleinheit verbunden.

1. Eines der beiden FNP Regale an der gewünschten Position aufstellen (entfällt bei Erweiterung eines bestehenden Regals).
2. Zweites Regal mit einem Abstand von einem Tابلär aufbauen.
3. Bei beiden Regalen die Tابلäre und Niete entfernen, die jeweils an die innere Regalseite angrenzen.

*The FNP connecting board allows the (later) extension of a FNP shelf widthways. This involves connecting two independent shelves together to form a shelf unit.*

1. Install one of the two FNP shelves in the required position (not necessary if an existing shelf is being extended).
2. Install the second shelf with a spacing of one shelf board.
3. For both shelves, remove the shelf boards and rivets that adjoin the inner side of the shelf.

II.

4. In den Freiraum zwischen den beiden Regalen die Verbindungstabläre einsetzen. Dazu die Aluminium-Schienen der Regale jeweils leicht aus der Nut ziehen, sodass die seitlichen Metallhaken des Verbindungstablärs zwischen Regalseite und Aluminium-Schiene aufliegen **a**.

5. Anschließend die entnommenen Niete **b** und die entnommenen Tابلäre einsetzen.

*4. Insert the connecting boards into the space between the two shelves. To do this, pull the aluminium rails of the shelves slightly out of the groove so that the connecting board's metal hooks at the side rest between the side panel and the aluminium rail **a**.*

*5. Then insert the removed rivets **b** and the removed shelf boards.*