

I.

Um einen Schubkasten einsetzen zu können, muss links und rechts von der vorgesehenen Position auf gleicher Höhe ein **freier Nuteinschnitt** der Regalseite vorhanden sein.
! Ist ein Nuteinschnitt z. B. durch ein Tablar oder eine Schiene belegt, kann kein Schubkasten eingesetzt werden.

HINWEIS: Bei einem hohen Schubkasten F kann der Auszug in der oberen **oder** unteren Nut laufen.

Anbringen des Auszugs

Montage rechter Auszug a
(Wenn rechts kein weiterer Schubkasten montiert wird.)
Einen Auszug A von vorne in den Nuteinschnitt einstecken. In den hinteren Nuteinschnitt das Auszug-Gegenstück B einführen. Den Haken des Auszugs A von oben in die Aussparung des Gegenstücks B eindrücken, sodass die beiden Metallteile fest ineinander einrasten.

Montage mittlerer Auszug b
(Wenn links oder rechts ein weiterer Schubkasten angebracht wird.)
Zwei Auszüge A in den vorderen bzw. hinteren Nuteinschnitt der Regalseite einstecken. Den Haken in die Aussparung des gegenüberliegenden Auszugs von oben eindrücken.

Montage linker Auszug c
(Wenn links kein weiterer Schubkasten eingestetzt wird.)
In den hinteren Nuteinschnitt der Regalseite einen Auszug A einschieben. In den vorderen Nuteinschnitt ein Auszug-Gegenstück B anbringen. Die beiden Teile so miteinander verbinden, dass der Haken des Auszugs A in die Aussparung des Gegenstücks B greift.

In order to be able to insert a drawer, a **vacant groove cut** must be present to the left and right of the intended position at the same level.
! No drawer can be inserted where a groove cut is occupied, e.g. by a shelf board or a rail.

NOTE: The pullout of high drawers F can run in the upper **or** lower groove.


Attaching the pullout

Assembly right pullout a
(if no additional drawer is attached to the right.)
Insert a pullout A from the front into the groove cut. Insert pullout-counterpart B into the rear groove cut. From above, press pullout hook A into the opening of counterpart B so that both metal pieces firmly grip into each other.

Assembly middle pullout b
(if an additional drawer is attached to the left or right.)
Insert two pullouts A into the front/rear groove cut of the side panel. From above, press the hook into the opening of the opposite pullout.

Assembly left pullout c
(if no additional drawer is attached to the left.)
Insert a pullout A into the rear groove cut of the side panel. Attach a pullout counterpart B into the front groove cut. Join both parts in such a way that the hook of pullout A grips into the opening of counterpart B.


I.

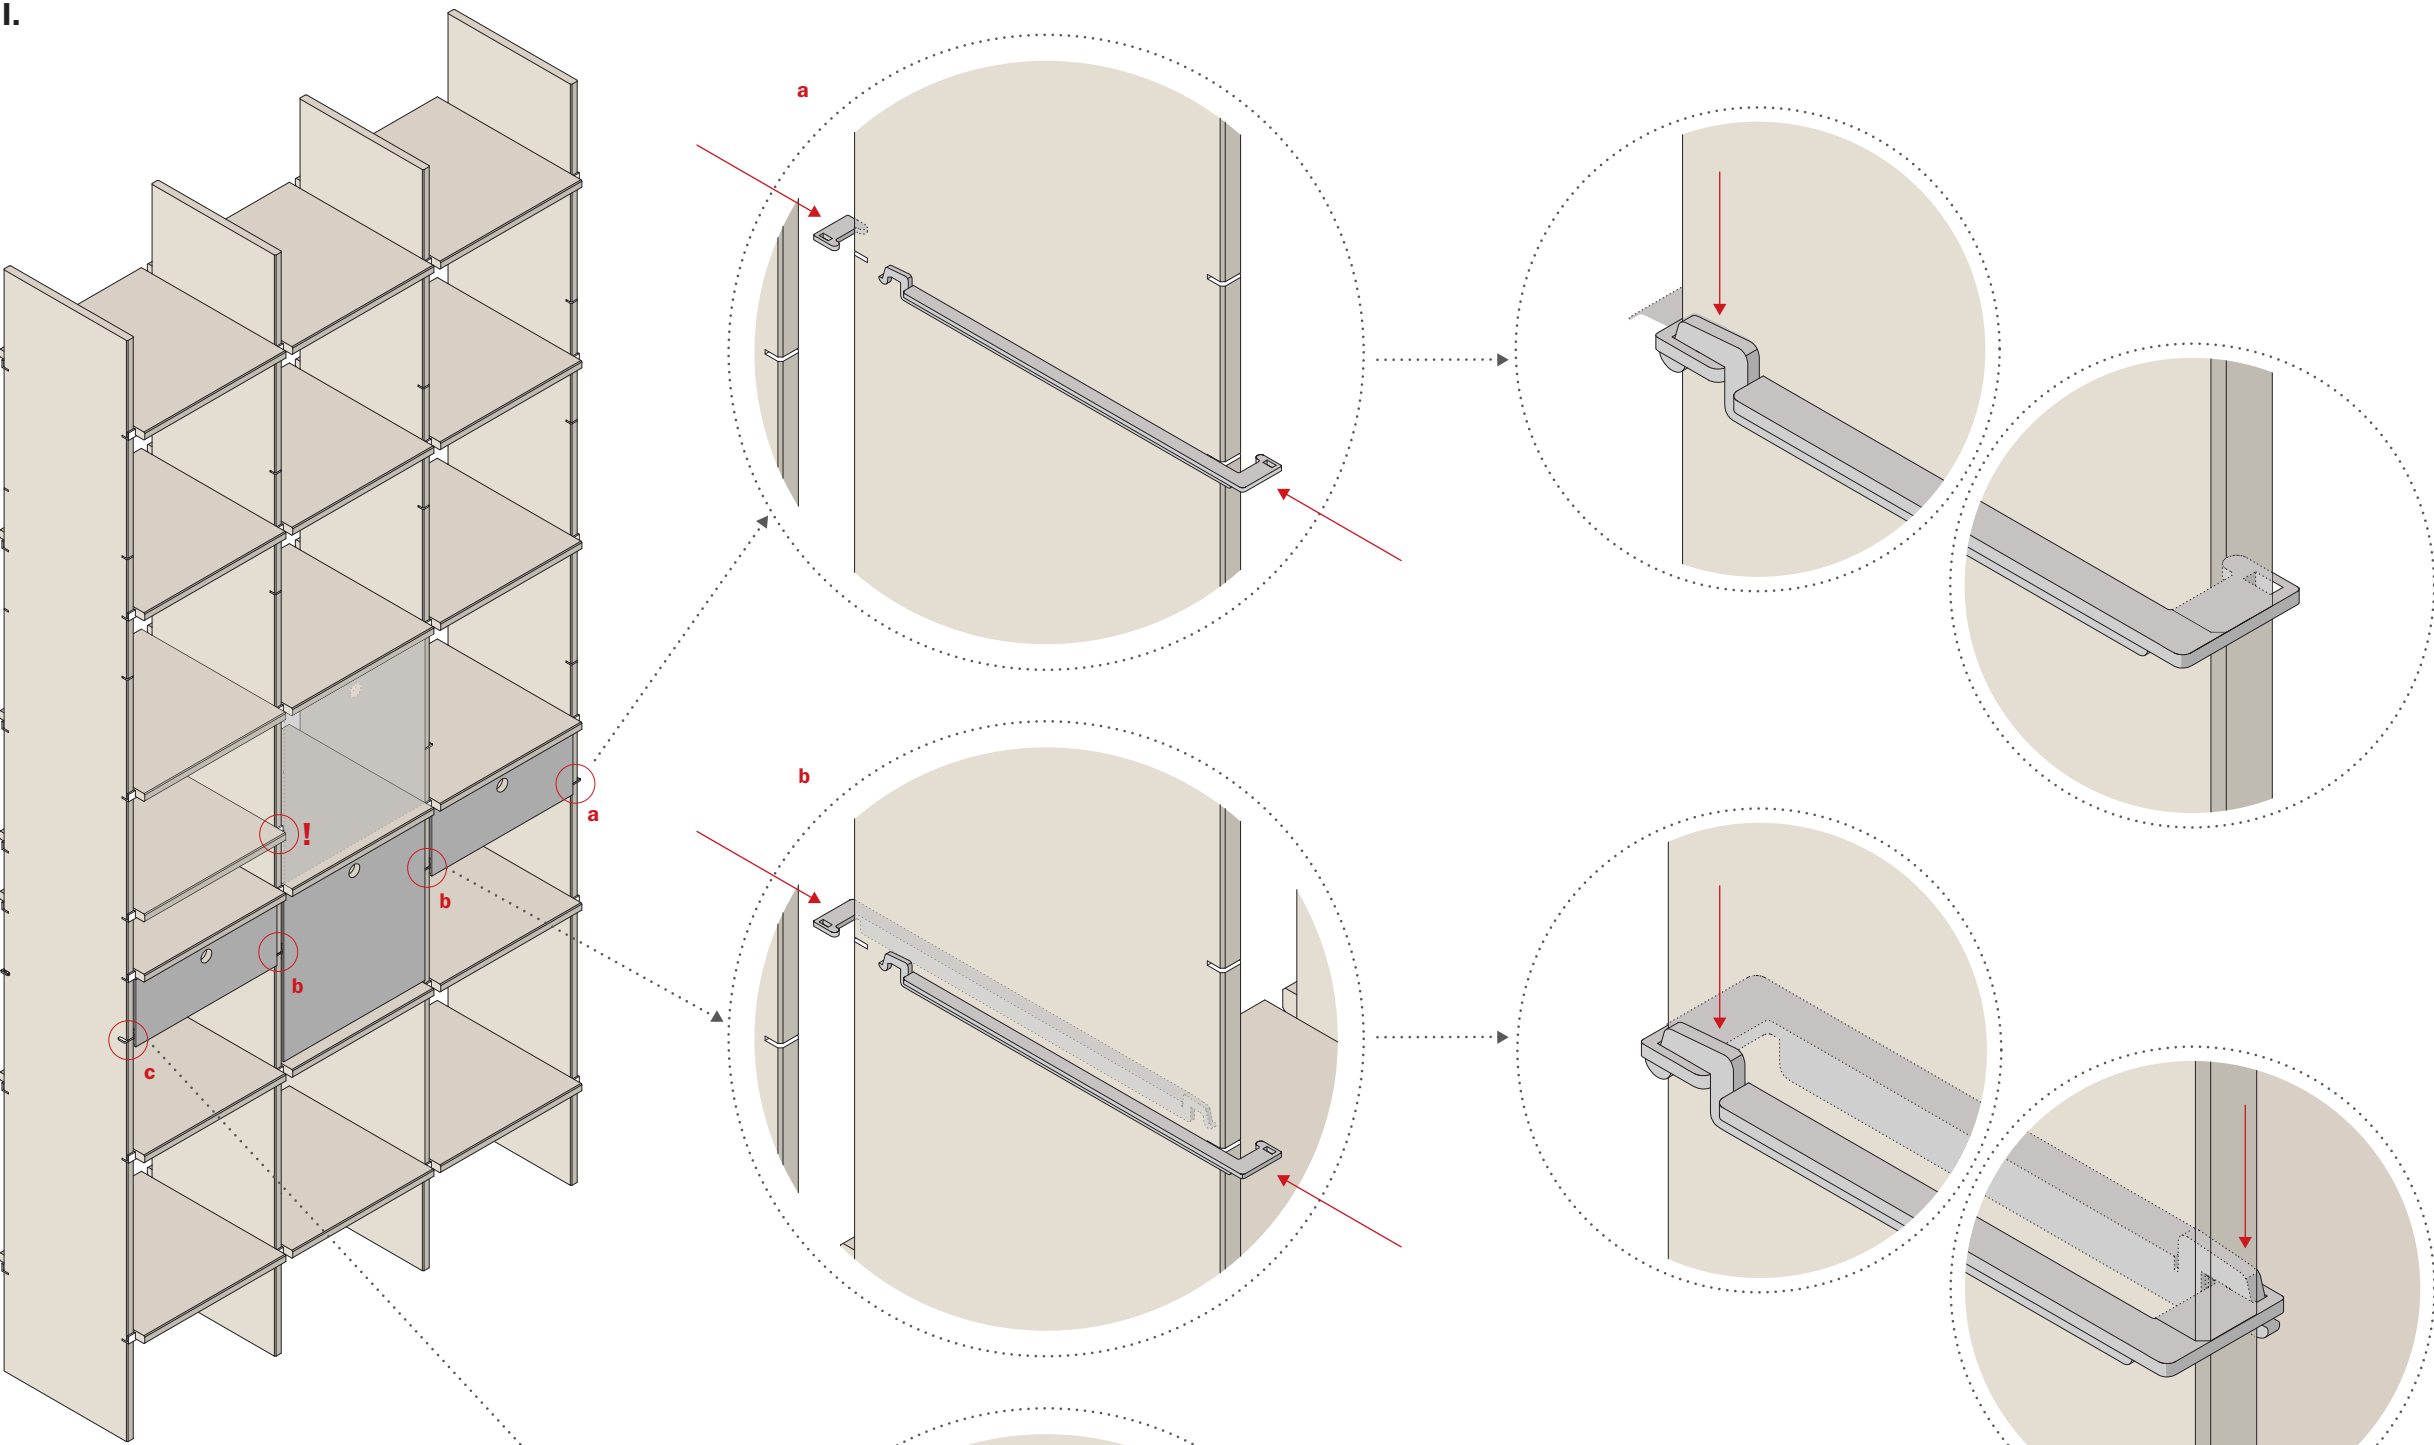

II.

Inserting the drawer


- To facilitate the later sliding of the drawer, rub the upper edge of the pullouts A with soap D.
 - Initially, place the groove of drawer E/F on one side onto pullout A or end piece B. Then, insert the other side of the drawer into the pullout.
 - Slide the drawer half-way into the shelf. Then, from within, slide a pullout stop C into the left-hand hole. For high drawers F, two pullout stops C are attached in the inside left.
- ! For low drawers E, the hole is located underneath the base.**

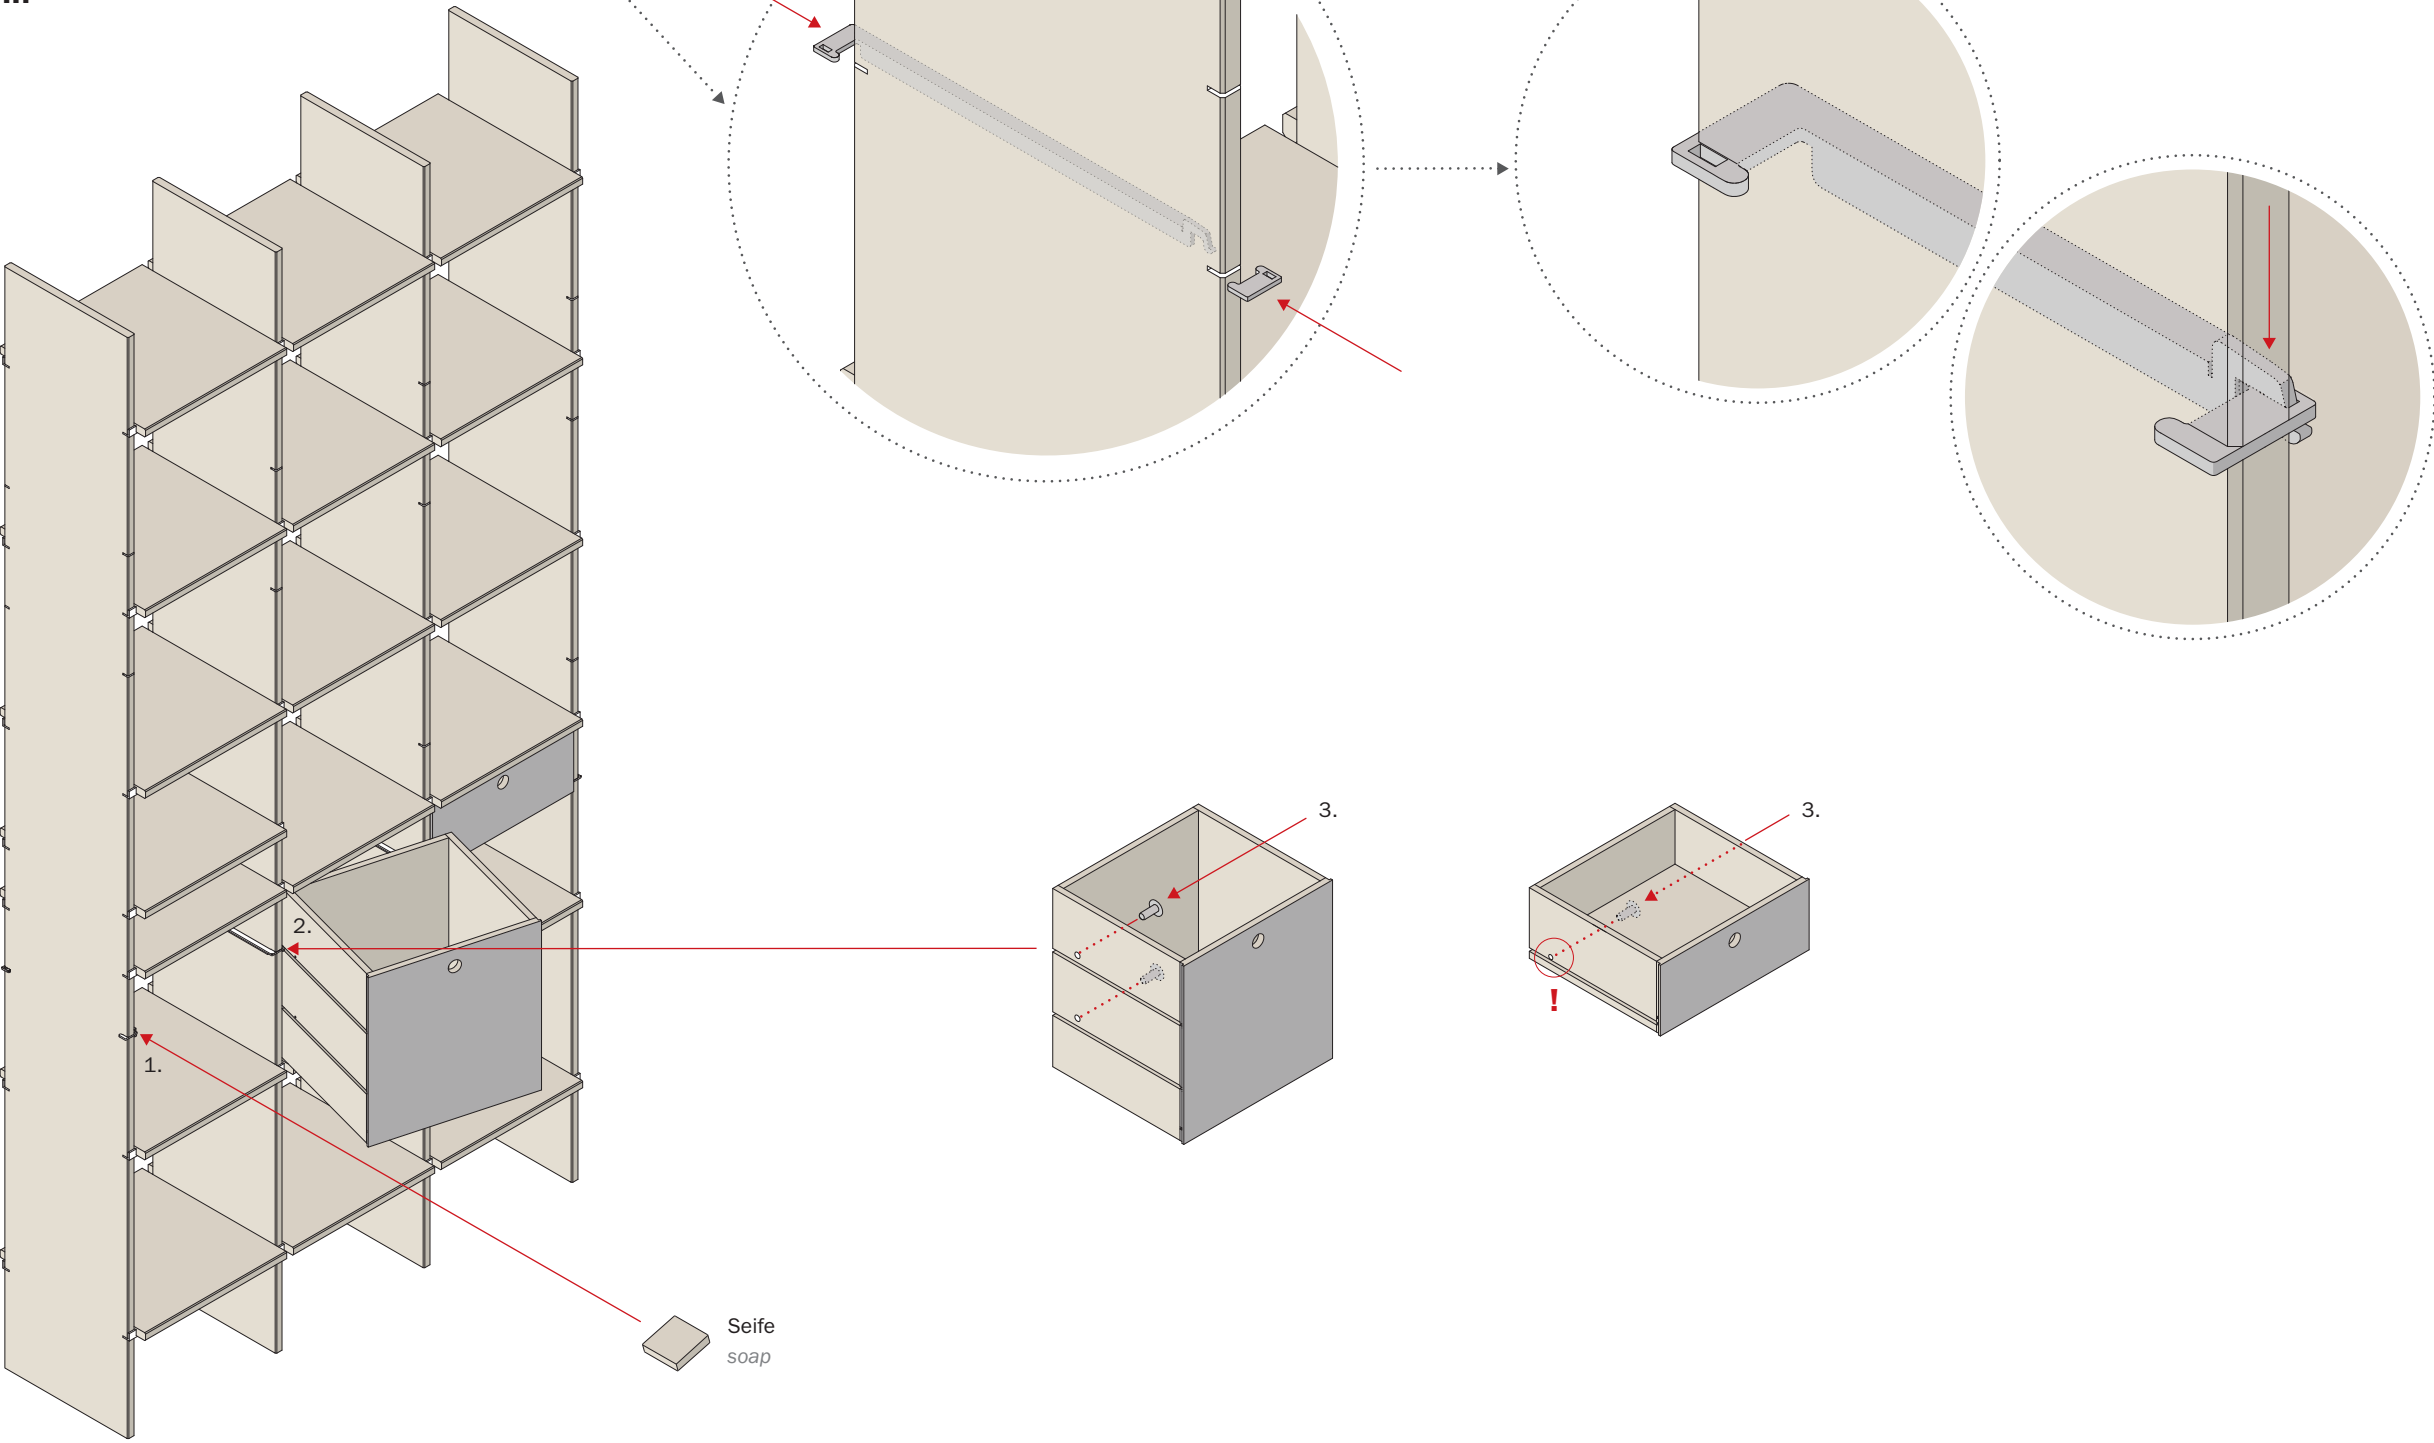

A Auszug x 2
pullout x 2



B Auszug Gegenstück x 2
pullout-counterpart x 2

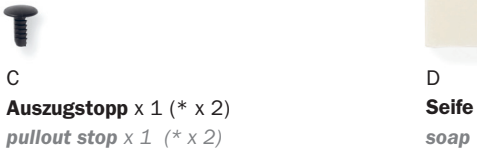


C Auszugstopp x 1 (* x 2)
pullout stop x 1 (* x 2)

D Seife
soap



E Schubkasten niedrig **
drawer low **

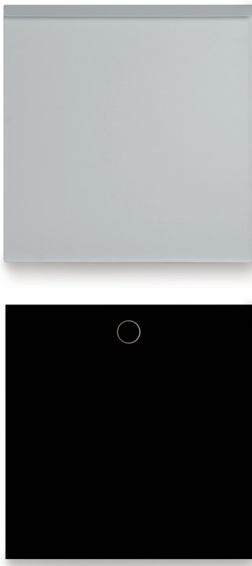

F Schubkasten hoch **
drawer high **

* für Schubkasten hoch
* for drawer high

** FU / MDF / Stahl
** FU / MDF / steel