




I.

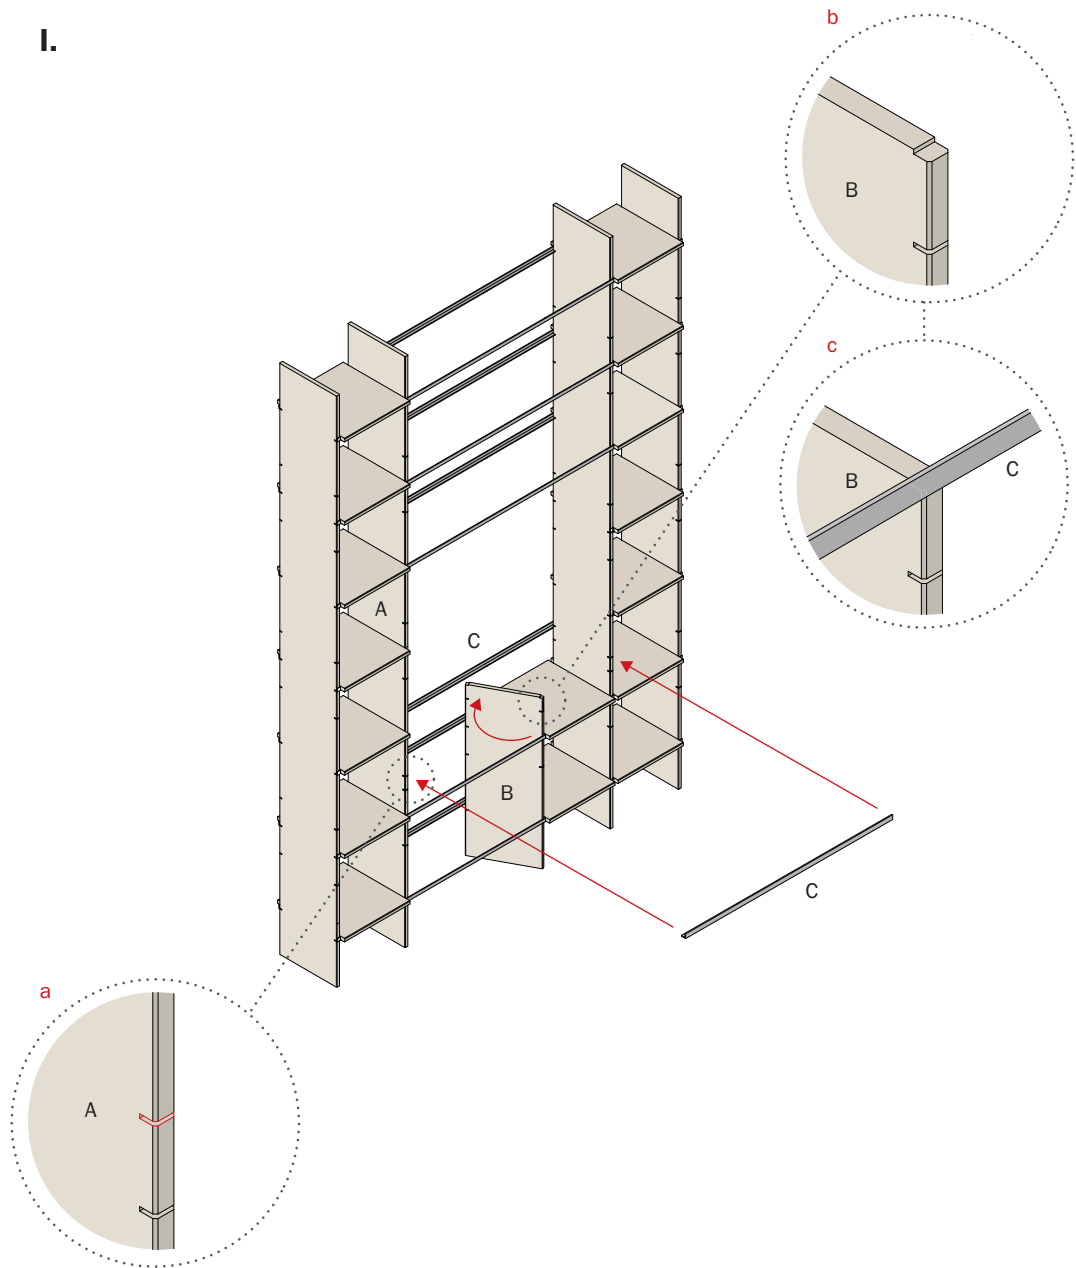

II.



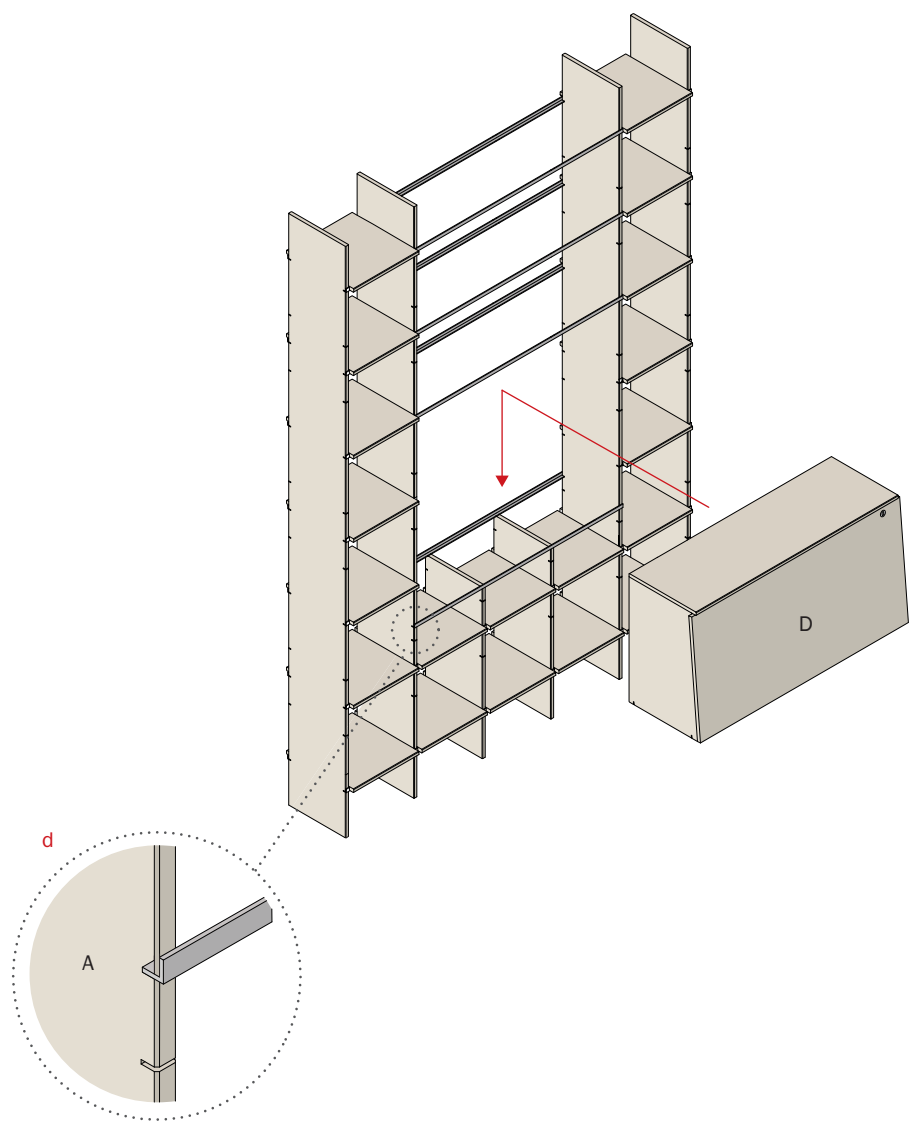


III.

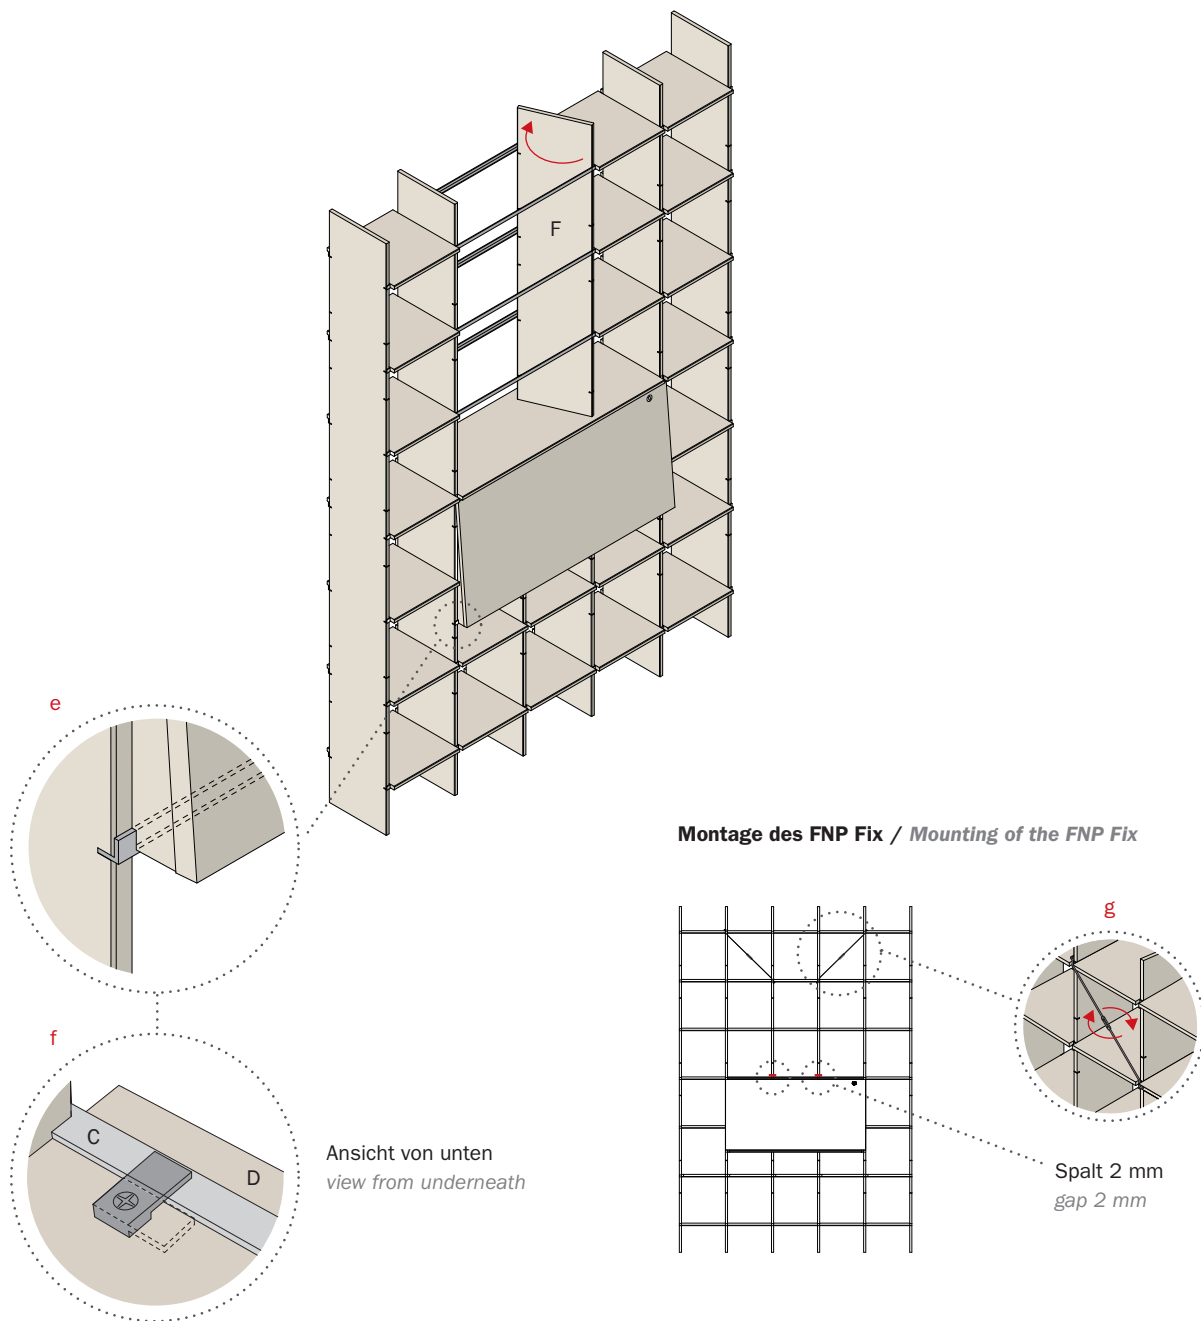

IV.

Einbau einer Elektronik-Einheit / Assembling of an electronic unit

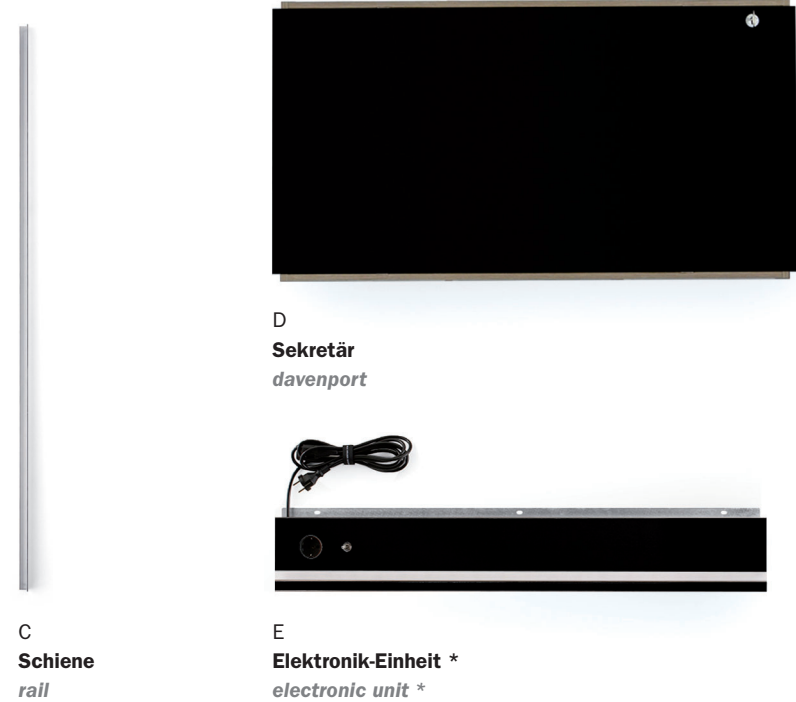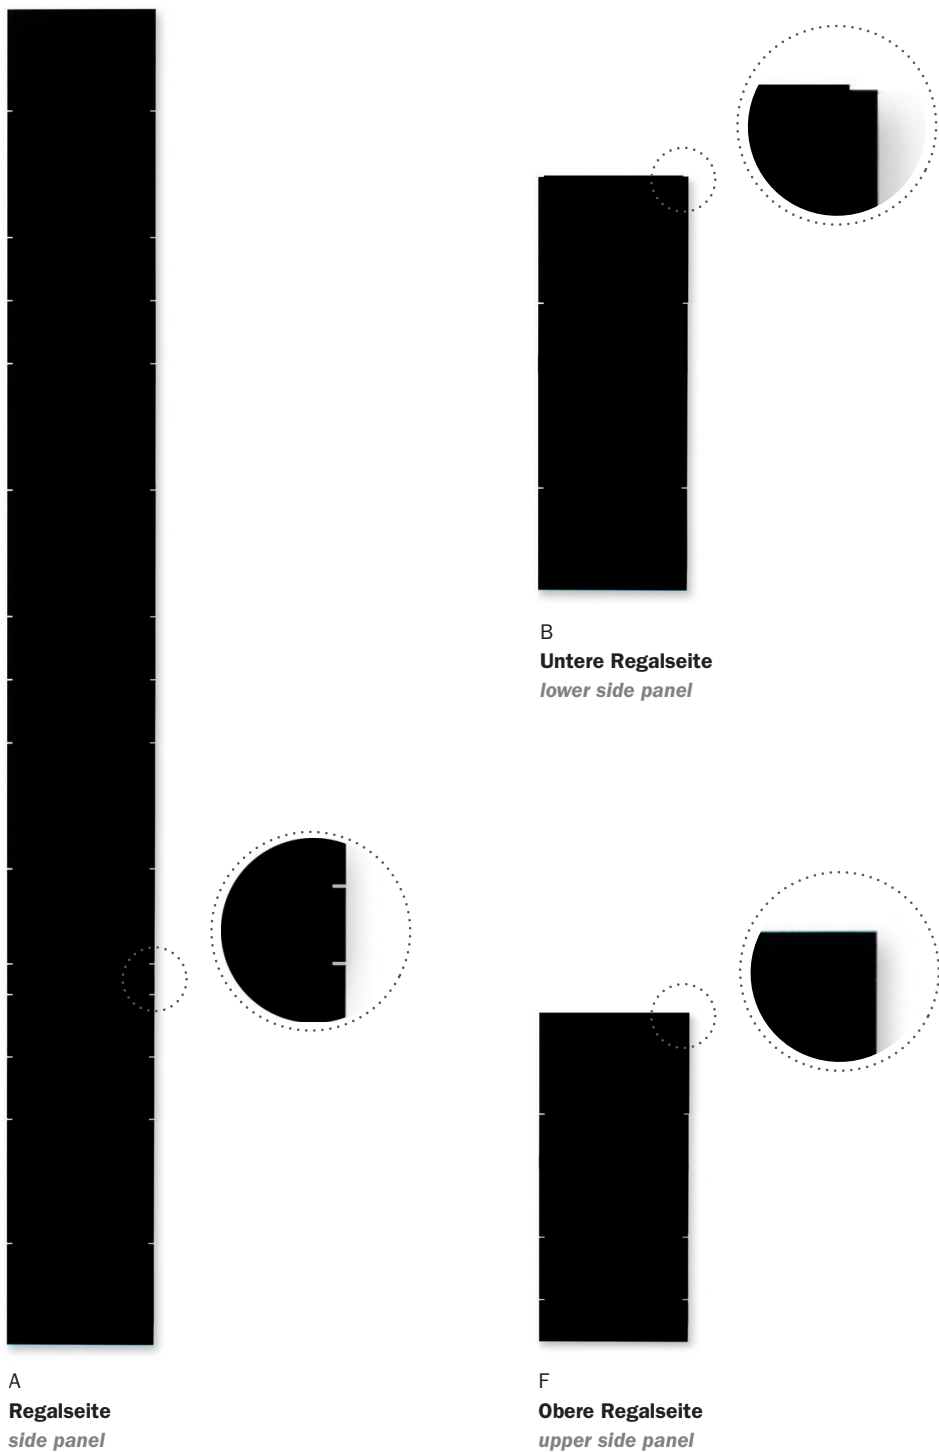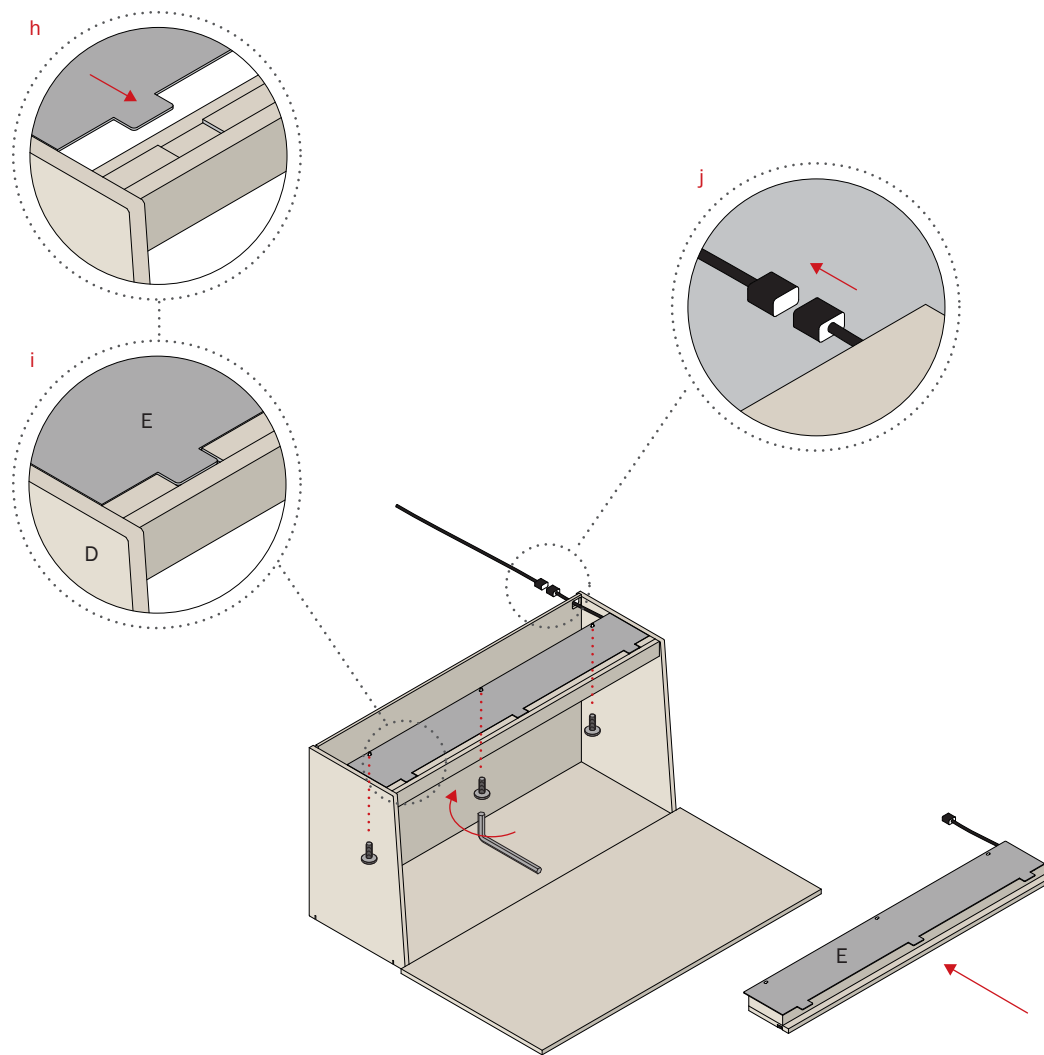

I.

Generell:
Der FNP Sekretär kann in Sitz- oder Stehhöhe angebracht werden. Das Aufbaubeispiel zeigt den Sekretär in Sitzhöhe.

- Das FNP wird nach der FNP Aufbauanleitung aufgebaut. Achten Sie darauf, dass die zwei Regalseiten A mit dem zusätzlichen Nuteinschnitt **links und rechts** des später einzubauenden Sekretärs sitzen (siehe Detail **a**).
- Die zwei unteren Regalseiten B, mit der Aussparung nach oben (siehe Detail **b**), in den unteren Teil des Regals einbauen und die Tablare einsetzen.
- Die zwei Schienen C (105,6 cm) auf die unteren Regalseiten B auflegen (siehe Detail **c**) und in die Sondernut der Regalseiten A einschieben (siehe Detail **d** / Zeichnung II.).

II.

- Den Sekretär D waagrecht in die Regal-Aussparung schieben.
- Anschließend den Sekretär D nach unten auf die Schienen C setzen. Die Schienen müssen dabei **in die unterseitigen Nuteinschnitten** des Sekretärs greifen (siehe Detail **e** / Zeichnung III.).
- Abschließend den Ausbeschutz über die Schiene C drehen (siehe Detail **f** / Zeichnung III.).

III.

- Nun das FNP Regal mit den oberen Regalseiten F und den restlichen Tablaren vervollständigen.
- Montage des FNP Fix**
- Das FNP Fix besteht aus dem linken/rechten Bügel G/H. Die beiden Bügel werden rückseitig, diagonal in die Fächer eingehängt. Die unteren Enden der Bügel müssen V-förmig auf die Mitte des Sekretärs zeigen. Die Regalseiten F oberhalb des Sekretärs mit den Bügeln G/H so justieren, dass diese nicht durchhängen (siehe Detail **g**). Siehe auch Aufbauanleitung FNP Fix!

Hinweis: Die auf dem Sekretär aufstehenden oberen Regalseiten F sind aus konstruktiven Gründen gekürzt, sodass ein Spalt von 2 mm entsteht.

IV.

- Einbau einer Elektronik-Einheit**
- Die Elektronik-Einheit E im Innenraum des Sekretärs mit der Oberseite an den Sekretär-Deckel anlegen (siehe Detail **h**) und nach vorne ziehen, so dass die drei Lamellen in die Ausfräsungen greifen (siehe Detail **i**).
 - Mithilfe des Innensechskantschlüssels J die Elektronik-Einheit durch Eindrehen der drei Schrauben I im Sekretär befestigen. Mit der mittleren Schraube beginnen.
 - Das Stromkabel durch den Kabeldurchlass in der Rückwand führen und mit der Verlängerung verbinden (siehe Detail **j**).

In general:

The FNP davenport can be mounted at sitting or standing height. The installation example shows the davenport at sitting height.

- Assemble the FNP shelf system by using the FNP assembly instruction. Make sure that the two shelf panels A with the additional groove cut sit to the **left and right** of the later installed davenport (see detail **a**).
- The two lower side panels B with a slot at the top (see detail **b**) are mounted to the lower part of the shelf. Then insert the shelf boards.
- The two rails C (105.6 cm) for the davenport are connected on top of the lower side panels B (see detail **c**) and to the additional groove cut in the side panels A (see detail **d** / drawing II.).

4. Stick the davenport D inside the shelf.

5. Connect the davenport D to the rails C. The rails must engage **in the underside fitted groove cuts** of the davenport (see detail **e** / drawing III.).

6. Finally turn the tipping protection over the rail C (see detail **f** / drawing III.).

7. Now complete the FNP shelf with the upper side panels F and the remaining shelf boards.

Mounting of the FNP Fix

8. The FNP Fix consists of the left-hand and right-hand bracket G/H. The two brackets are hooked diagonally on the backside of the compartments. The bottom ends of the brackets should form a v-pattern directing to the center of the davenport. The side panels F above the davenport should be adjusted so that so that they do not sag (see detail **g**).

Note: The upper side panels F which are ending on top of the davenport, are shortened due to constructional reasons and will create a gap of 2 mm.

Assembling of an electronic unit

- Place the electronic unit E inside the davenport desk with the top facing the davenport desk lid (see detail **h**) and pull forward, so the three slats catch in the milling grooves (see detail **i**).
- Using hexagon wrench J, secure the electronic unit by tightening the three screws I in the davenport desk. Begin with the middle screw.
- Guide the electric cable through the cable hole in the rear wall and connect it using the extension (see detail **j**).

* freiwilliges Add-on, auch nachträglich einbaubar.
* optional add-on, can be installed later.